Vertical Position Adjustment Tool

OS	WindowsXP/7/8 32-bit,Windows7/8 64-bit
Printer	CP-D70DW/CP-D70DW-S/CP-D70DW-U CP-D707DW/CP-D707DW-S/CP-D707DW-U *1 *1 : Each Lower /Upper deck needs to be adjusted.

<About this tool>
This is the adjustment tool for vertical position. When a white line (border) appears at top or bottom of a print, the white line can be eliminated by the adjustment

<How to use this tool>
1. Connect a printer to the PC and double-click PrintAdj.exe to run this tool. Then, click "Detect" button [1] and check if your printer model name appears in the windows [2].

2. Click "Print test" button [3] to perform test print.

3. See the test print so that characters in the center of the test print is shown right side up, and if a white line appears on the bottom of the print, select the button on the left side, and if a white line appears on the top, select the button on the right side of radio buttons of [4].

4. Measure width of the white line and select one of appropriate Adjusted Value pull down button [5]


5. Click "Set" button [6].
NOTE: When no white line appears at the top or bottom of the test print, do not click "Set" button. It may change the printer setting and a white line appears at the top or bottom, although it is adjustable by this tool.

6. Click "Print" button to see if the adjustment is effective.
If more adjustment is required, repeat the above step 3 - 6.

NOTE: When "Reset" button [7] is pressed, the current adjustment value is discarded and the standard value is set.

<Cautions>
*Sometimes there is a difference in moving amount of the value shown in the "Current Set Value" after setting the value specified by the "Adjusted value".By including a likelihood of adjustment, there is no problem in the performance of this adjustment.
*Please execute the tool with the administrator rights.
*Please do not start this tool during printing.
*This tool can be used when there is no error in the printer.
*After starting the tool, please do not change the printer connection.
*After adjusting in this tool, and then successfully completed the tool, please print the following.
*If the tool is not completed properly due to forced termination, please power OFF / ON the printer.
*Because the Test print printed by this tool is used only for the adjustment purpose,its print image quality is different from normal prints.

Application Window

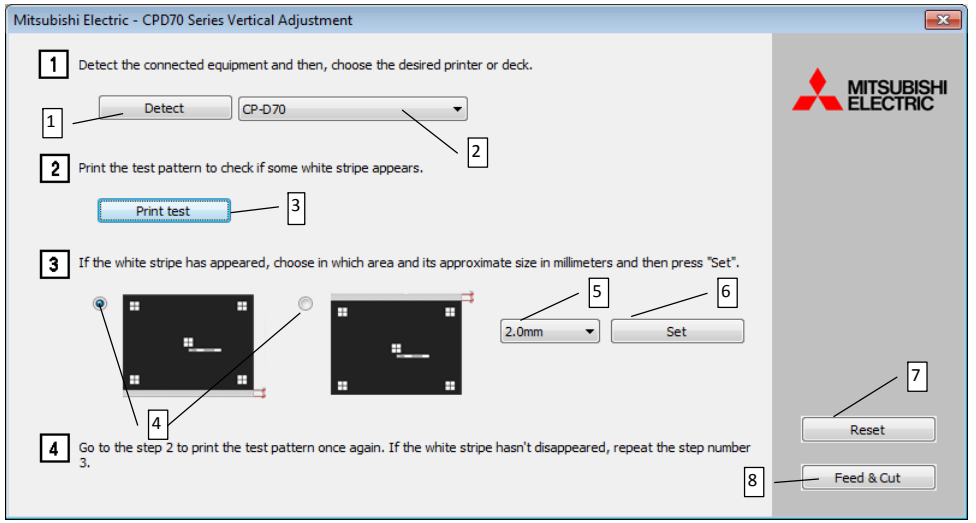

No.	items	form	note	
1	Detect	Button	Detect a connecting printer.	
2	Printer model name	Pull down	Select upper or lower when D707 is connected.	
			CP-D70	CP-D70DW/CP-D70DW-S/CP-D70DW-U
			CP-D707 Lower	CP-D707DW/CP-D707DW-S/CP-D707DW-U
			CP-D707 Upper	
3	Print test	Button	Print a test image.	
4	Select test print image	Radio button	Select a white border position	
5	Adjust value	Pull down	Select an adjust value.	
6	Set	Button	Set an adjust value.	
7	Reset	Button	Set the standard value	
8	Feed & Cut	Button	Perform paper feed and Cut	